


- FIRING ORDER -
1-5-4-8-6-3-7-2

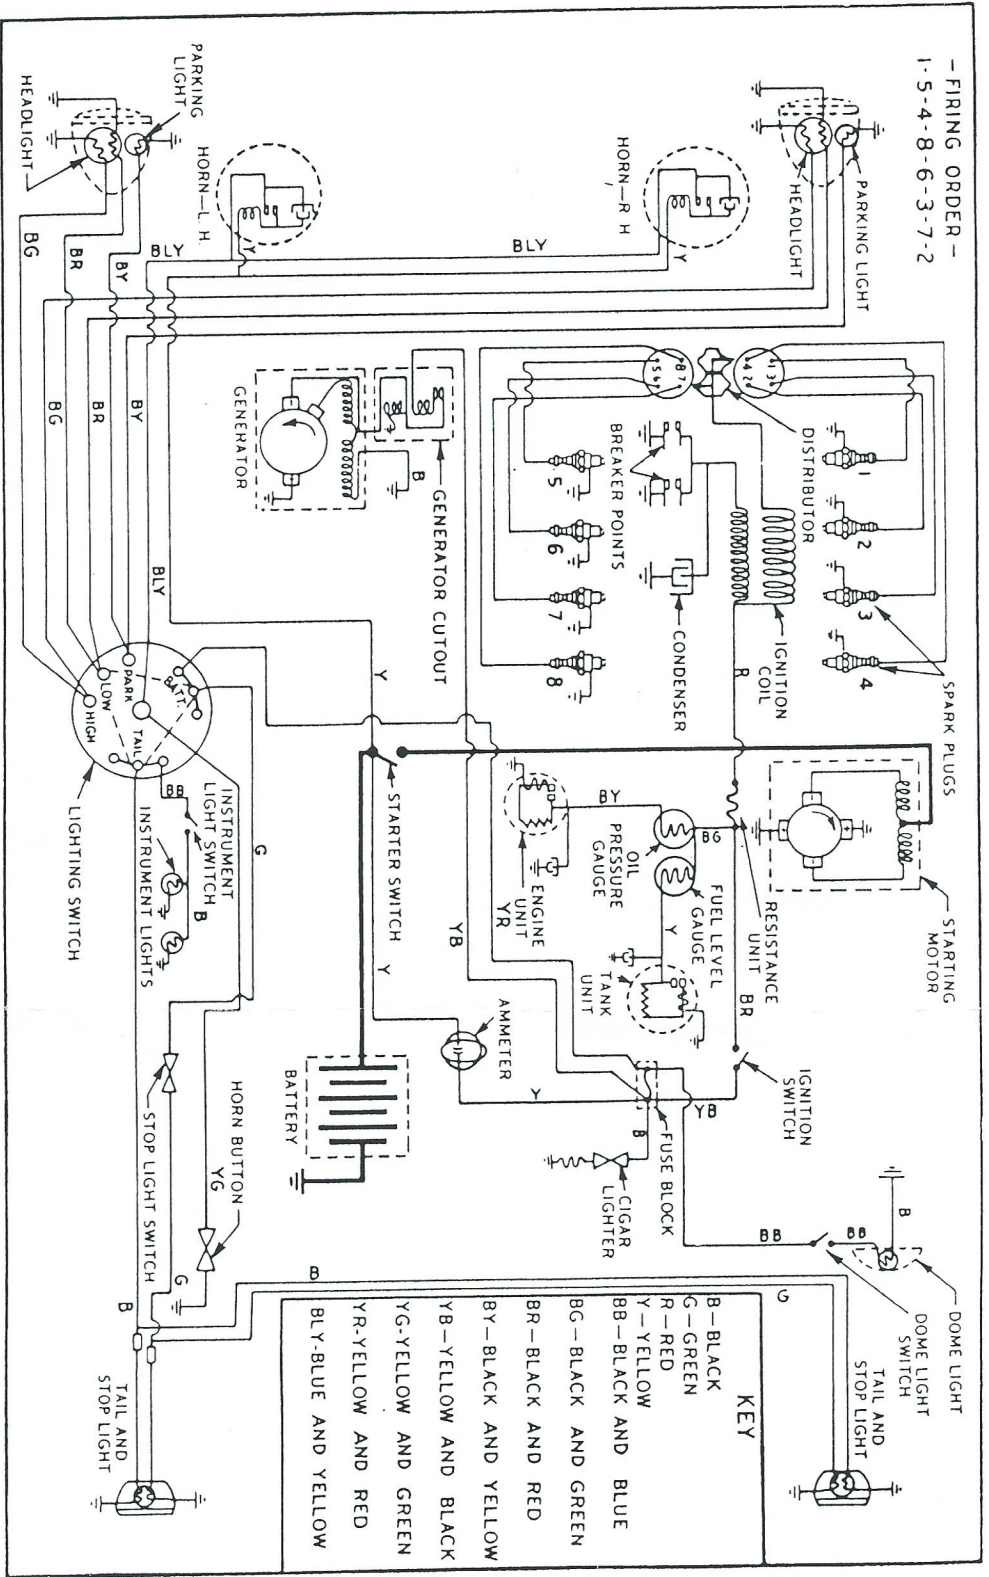

WIRING DIAGRAM
Figure 13